



AGES 5 & UP

# JAZZIN DRUM™

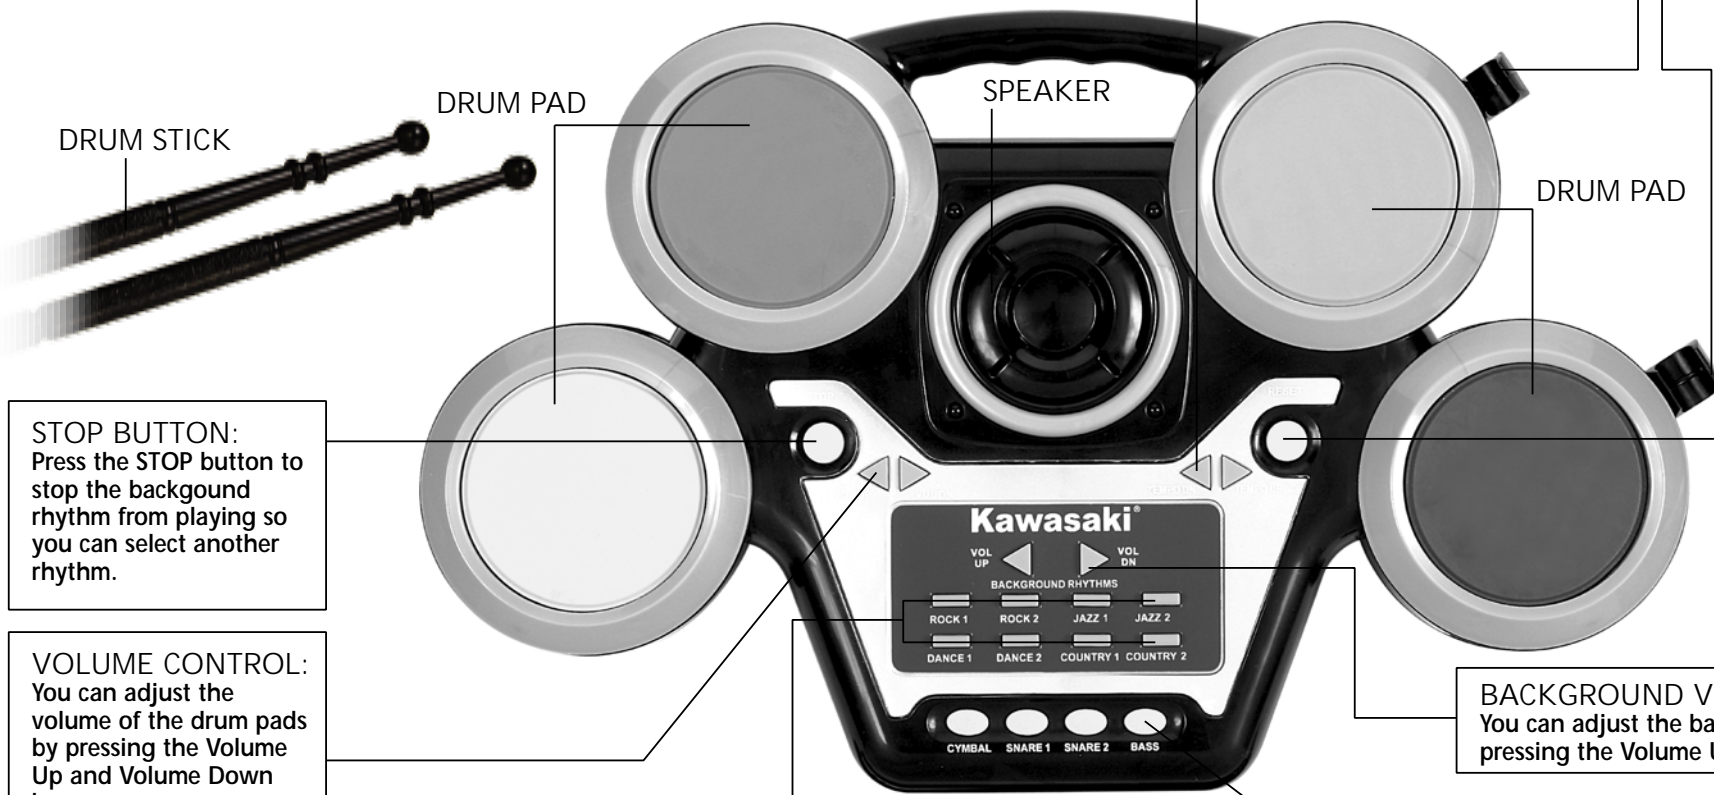

**TEMPO CONTROL:**  
You can select the music speed by pressing these two keys. Press the TEMPO UP to speed up the melody and press the TEMPO DOWN to slow down the rhythm.

**DRUM STICK HOLDER:**  
Place your drum sticks here when not using them.

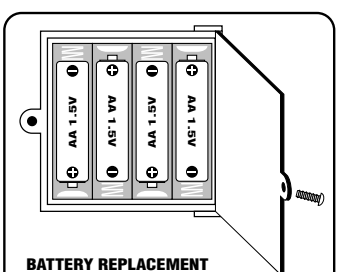

**BATTERY REPLACEMENT**  
REMOVE SCREW TO OPEN BATTERY COMPARTMENT COVER. THIS UNIT REQUIRES 4 "AA" BATTERIES (INCLUDED). ALWAYS REPLACE ALL FOUR BATTERIES AT THE SAME TIME. REPLACE BATTERY COMPARTMENT COVER AND SCREW. ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE. DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED. DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.

**STOP BUTTON:**  
Press the STOP button to stop the background rhythm from playing so you can select another rhythm.

**VOLUME CONTROL:**  
You can adjust the volume of the drum pads by pressing the Volume Up and Volume Down keys.

**BACKGROUND RHYTHMS:**  
There are a total of 8 background rhythms to choose from:

Rock 1	Dance 1
Rock 2	Dance 2
Jazz 1	Country 1
Jazz 2	Country 2

Press any one of these keys and you will hear the corresponding rhythm. These rhythms will play in the background so you can continue to play on the drum pads and still be able to hear the rhythm. To choose another rhythm, simply press another button.

**RESET BUTTON:**  
Press the RESET button to clear any rhythms/sounds that you have already selected and/or are playing. All functions will reset to normal.

**BACKGROUND VOLUME:**  
You can adjust the background volume level by pressing the Volume Up and Volume Down keys.

**DRUM PAD / DRUM SOUNDS:**  
There are a total of 4 drum pads with 4 different beats  
Choose from: CYMBAL, SNARE 1, SNARE 2 or BASS

THE JAZZIN DRUM WILL TURN OFF AUTOMATICALLY (SLEEP MODE) AFTER 40 SECONDS OF NON USE. TO ACTIVATE THE DRUM PADS YOU HAVE TO FIRST PRESS THE BUTTONS AND THEN PLAY THE DRUM SOUNDS.

 because kidz like toyz  
**KIDZ TOYZ, INC.** MT. KISCO, N.Y. 10549

For Product Questions,  
Call 1-877-KIDZTOY (877-543-9869)  
Ask for CUSTOMER SERVICE.  
Only in the U.S. and CANADA



KAWASAKI® IS A TRADEMARK LICENSED BY KAWASAKI MOTORS CORP., U.S.A., WHICH DOES NOT MANUFACTURE OR DISTRIBUTE THIS PRODUCT. CONSUMER INQUIRIES SHOULD BE DIRECTED TO KIDZ TOYZ, INC., 280 NORTH BEDFORD ROAD, SUITE 203, MT. KISCO, NEW YORK 10549 USA

Please visit us on the web at [www.kidztoyz.com](http://www.kidztoyz.com)

**MADE IN CHINA**  
ITEM NO. 77067