

FM LIGHT UP MIKE™

AGES 5 & UP

TO GET THE MOST USE AND ENJOYMENT OUT OF YOUR FM LIGHT UP MIC, PLEASE READ AND UNDERSTAND THE INSTRUCTIONS BEFORE USING.

BATTERY INSTALLATION

1. To remove the battery cover, unscrew the battery cover.
2. Install two new batteries (AA size) in accordance with the instructions located in the battery compartment. Replace the battery cover.
3. The microphone can be tested for operation by press the ON/OFF button to the "ON" position and the light should light up.
4. Do not mix old and new batteries.
5. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
6. Non-rechargeable batteries are not to be recharged.
7. Batteries are to be inserted with the correct polarity.
8. Exhausted batteries are to be removed from the toy.
9. The supply terminals are not to be short-circuited.

NOTE: When using the FM LIGHT UP MIC, hold the Microphone (2 inches) 5.08cm from your mouth and speak in a normal voice into the top of the microphone cover.

TO OPERATE

1. Works with most quality FM radios. Turn the radio ON and face the radio towards you. Adjust the radio volume to a low level.
2. Place the Microphone near the radio and turn it on. Hold the Microphone cover (2 inches) 5.08cm from your mouth and speak in a normal voice while tuning your FM radio back and forth across the 100 mark on the tuning dial.
3. After the FM radio is tuned to the Microphone, move about (5 feet) 52.4cm away from the radio. Speak into the Microphone while someone carefully tunes the radio to the best reception. When using the Microphone at a distance of (10 feet) 304.8cm or more from the radio, it may be necessary to increase the radio volume and carefully tune the radio again for best reception.
4. For best results, stand (5 feet) 152.4cm to (10 feet) 304.8cm away from the radio.

IMPORTANT NOTES:

- This Microphone is for use with FM radios only and will not work on the AM band.
- The tuning range of your FM LIGHT UP MIC is 100 on the FM dial.
- When using Microphone, keep the antenna facing toward the receiver and the receiver facing the Microphone.
- When using the Microphone, hold the Microphone (2 inches) 5.08cm your mouth and speak in a normal voice.
- The reception of the Microphone may be affected by the environment i.e. metal structure or the movement of people between the Microphone and the radio. The reception is also affected by the condition of the Microphone and/or radio batteries.
- If the Microphone is not to be used for an extended period, remove the batteries from the set.
- For best results, the manufacturer recommends the use of alkaline batteries.
- To prevent damage, do not expose the set to rain or moisture.
- Modifications not authorized by the manufacturer may void users authority this device.



THIS MICROPHONE HAS BEEN FACTORY TESTED. PLEASE READ AND FOLLOW THE INSTRUCTIONS FOR BEST PERFORMANCE AND ENJOYMENT.



because kidz like toyz

KIDZ TOYZ, INC. MT. KISCO, N.Y. 10549

For Product Questions,
Call 1-877-KIDZTOY (877-543-9869)
Ask for CUSTOMER SERVICE.
Only in the U.S. and CANADA

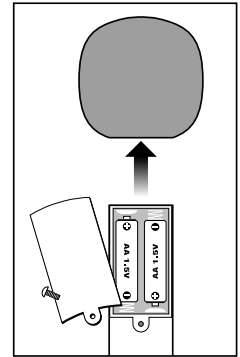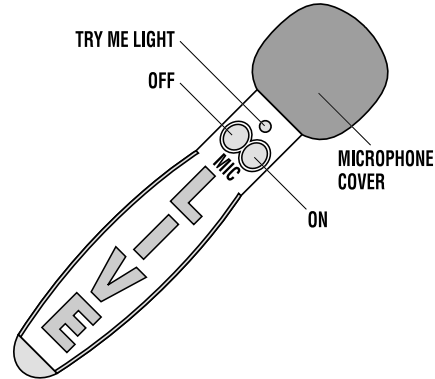

BATTERY REPLACEMENT

REMOVE SCREW TO OPEN BATTERY COMPARTMENT COVER.

THIS UNIT REQUIRES 2 "AA" BATTERIES (INCLUDED).

ALWAYS REPLACE BOTH BATTERIES AT THE SAME TIME.

REPLACE BATTERY COMPARTMENT COVER AND SCREW.

ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE.

DO NOT MIX OLD AND NEW BATTERIES.

DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIMUM) BATTERIES.

NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.

BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.

EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY.

THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.

RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED.

RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION.

ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.

DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.



87-11504-45628

KAWASAKI® IS A TRADEMARK LICENSED BY
KAWASAKI MOTORS CORP., U.S.A.,
WHICH DOES NOT MANUFACTURE OR DISTRIBUTE THIS PRODUCT.
CONSUMER INQUIRIES SHOULD BE DIRECTED TO
KIDZ TOYZ, INC., 280 NORTH BEDFORD ROAD,
SUITE 203, MT. KISCO, NEW YORK 10549 USA

MADE IN CHINA
ITEM NO. 88045

Please visit us on the web at www.kidztoyz.com