AGES 5 & UP

# Kawasaki® iSOUNDZ Music™

Thank you for purchasing the Kawasaki i soundz Audio Pro Keyboard.
This interactive keyboard will bring you hours of fun for the entire family.

# Audio Pro Keyboard

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.
NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THE EQUIPMENT SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.
NOTE: THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER,THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION.
IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES
- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCE RADIO/TV TECHNICIAN FOR HELP.

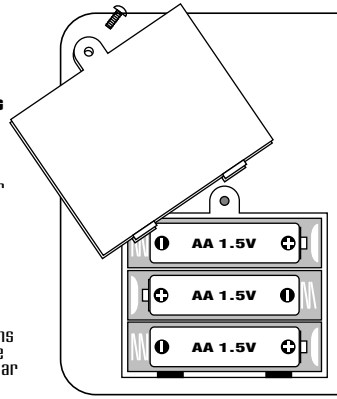


## BATTERY REPLACEMENT

**REMOVE SCREW TO OPEN BATTERY COMPARTMENT COVER.**
**THIS UNIT REQUIRES 3 "AA" BATTERIES (INCLUDED).**
**ALWAYS REPLACE ALL THREE BATTERIES AT THE SAME TIME.**
**REPLACE BATTERY COMPARTMENT COVER AND SCREW.**
**ALKALINE BATTERIES ARE RECOMMENDED FOR BEST PERFORMANCE.**
**DO NOT MIX OLD AND NEW BATTERIES.**
**DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.**
**NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.**
**BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.**
**EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY.**
**THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.**
**RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED.**
**RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION.**
**ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.**
**DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.**

**MP3 MUSIC PLAYER HOLDER**
You can play your keyboard with or without your MP3 player. If you choose to use your MP3 player, the MP3 Music Player holder provides a space for you to put your MP3 Music Player. If you choose not to use your MP3 player there is some very cool music already programmed! The holder fits some MP3 players but not all of them. If yours does not fit you can plug the jack in and lay it on the surface your playing on. After you plug in your MP3 player, turn it on and adjust the volume to the desired level.

**ON/OFF SWITCH**
The on/off switch controls whether the music plays thru the speakers or not. If your MP3 player is on and playing and you switch the keyboard to the "ON" position the music can be heard thru the speakers. If you switch it to the "OFF" position the music will not come thru the speakers. However if you press any buttons or keys on the keyboard (except the 4 sound effect buttons) your MP3 player will reactivate and the music will begin to play thru the speakers. Please make sure you always turn the keyboard on/off switch to the "OFF" position when you are finished playing. You must also turn off your MP3 player or else it will drain the batteries on your keyboard.

**RECORD SWITCH**
You can record approximately 10 seconds of your music by pressing the record button. To hear the music you have recorded press the play button. To erase what you have recorded press the record button again and it will be erased.

**PLAY SWITCH**
Press this button to listen to the music you have recorded. It will continue to play until you press the "STOP" button.

**HIGH QUALITY SPEAKER**

**DEMO SONGS**
There are 3 great songs to listen to and play along with. Press this button to hear the 3 songs.

**STOP SWITCH**
Press this button to stop the music that is playing.

**VOLUME CONTROL**
Press the + or – sign to raise or lower the volume of the keyboard.

**SPIN DISC**
This is a very cool feature of this keyboard. Press anyone of the 4 sound effect buttons. Then take your finger and move it in a circular motion on the spin disc and you will hear the sound effect you just pressed. You can move it in either direction.

**SOUND EFFECTS**
There are 4 sound effects. Press one of the 4 buttons to hear the different sound effects.

**10 INSTRUMENTS**
There are 10 different instruments to choose from. Press the top or bottom to hear and play the 10 instruments.

**10 RHYTHMS**
There are 10 different rhythms to play along with. Press the top or bottom buttons to hear the 10 different rhythms.

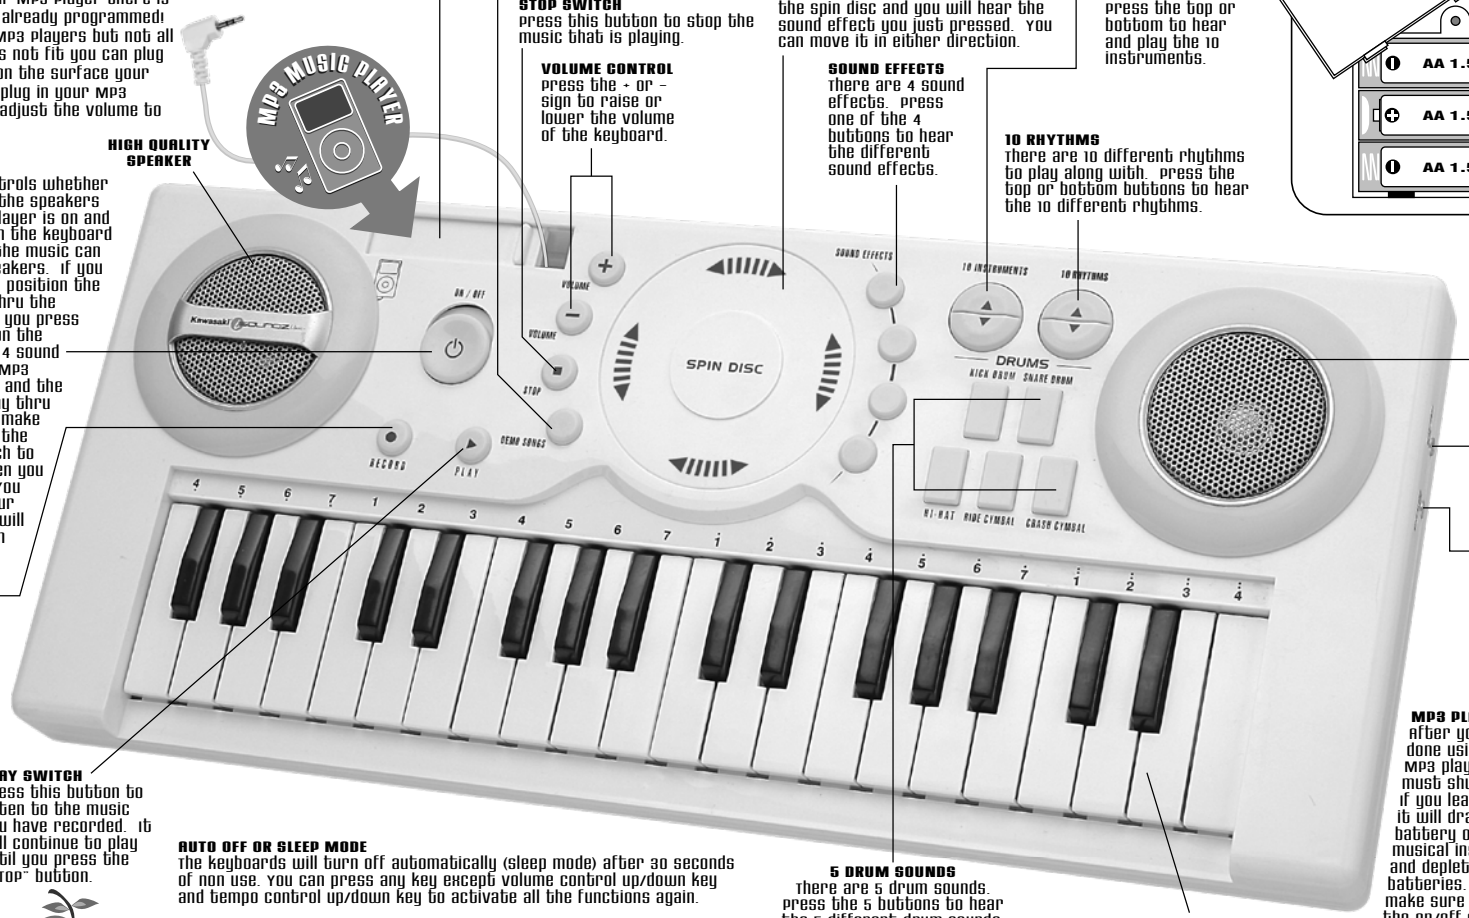


**AUTO OFF OR SLEEP MODE**
The keyboards will turn off automatically (sleep mode) after 30 seconds of non use. You can press any key except volume control up/down key and tempo control up/down key to activate all the functions again.

**5 DRUM SOUNDS**
There are 5 drum sounds. Press the 5 buttons to hear the 5 different drum sounds.

**37 KEYS**
There are 37 keys to play your music.

WORKS WITH iPod®

**HIGH QUALITY SPEAKER**

**HEADPHONE JACK**
Plug your headphone into this jack for private listening. Most headphones can be used. A headphone is not included.

HEADSET JACK

**SING ALONG JACK**
You can sing along with your favorite musicians or the music you are playing. Just plug in a sing along mic into this jack and sings along. Kawasaki i soundz Music also has an Audio Pro Mic available for separate purchase.

MP3

**MP3 PLAYER**
After you are done using the MP3 player you must shut it off. If you leave it on it will drain the battery on the musical instrument and deplete the batteries. Please make sure you shut the on/off switch to the off position on the instrument as well.

Kawasaki
Kawasaki Motors Corp., U.S.A.
OFFICIAL LICENSED PRODUCT

87-11504-45628

KAWASAKI® IS A TRADEMARK LICENSED BY KAWASAKI MOTORS CORP., U.S.A., WHICH DOES NOT MANUFACTURE OR DISTRIBUTE THIS PRODUCT. CONSUMER INQUIRIES SHOULD BE DIRECTED TO KIDZ TOYZ, INC., 280 NORTH BEDFORD ROAD, SUITE 203, MT. KISCO, NEW YORK 10549 USA

BIG MUSIC COMPANY SUBSIDIARY OF KIDZ TOYZ, INC.

because kidz like toyz
KIDZ TOYZ, INC. MT. KISCO, N.Y. 10549

For Product Questions,
Call 1-877-KIDZTOY (877-543-9869)
Ask for CUSTOMER SERVICE.
Only in the U.S. and CANADA

iPod® is a registered trademark of Apple Computer, Inc.
The product sold in this package has not been endorsed or approved by Apple Computer, Inc.

Zune® is a registered trademark of Microsoft Corporation.

Please visit us on the web at www.kidztoyz.com

MADE IN CHINA
ITEM NO. 77204